



[en] Instructions on mounting an use

Combination steam oven

5KD94150AU

CONTENTS

CONTENTS	33
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	34
ADDENDUM	34
SPECIFICATIONS	34
IMPORTANT SAFETY INSTRUCTION	35–36
TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION	37–39
SETTING UP YOUR OVEN	39
IMPORTANT INFORMATION ABOUT INSTALLING	40
PLACEMENT	41
INSTALLATION DIMENSIONS	41
BUILDING IN	41–42
BEFORE FIRST USE	43
OPERATION INSTRUCTION	44–51
TROUBLESHOOTING	63

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	5KD94150GB
Rated Voltage:	230V~50Hz
Rated Input Power(Microwave):	1550W
Rated Output Power(Microwave):	900W
Rated Output Power(Grill):	1200W
Rated Input Power(Convection):	1750W
Rated Input Power(Steam):	1500W
Rated Input Power(Maximum):	3300W
Oven Capacity:	34L
External Dimensions:	595x525x454mm
Net Weight:	Approx. 33kg


IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. Children should be supervised to ensure that they do not play with the appliance.
25. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
26. Accessible parts may become hot during use. Young children should be kept away.
27. Steam cleaner is not to be used.
28. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
29. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
30. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
31. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
32. Surface of a storage cabinet can get hot.
33. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
34. **WARNING:** When move the oven, do not carry handle. (Oven is overweight, handles are easily broken.)
35. The water in the receiving tank, inside the oven and in the water tank should be cleaned up after each use.
36. Do not use the paper cups and plastic containers with a melting temperature below 120 degrees. The glass, ceramic, stainless steel utensils can be used.
37. Steam is the main heating function for this product.

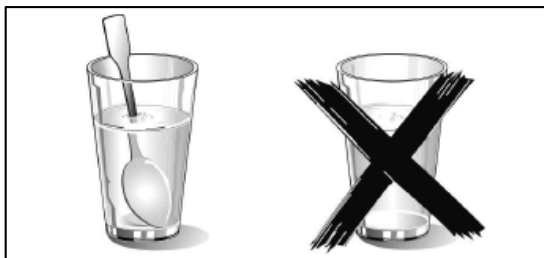

o If you are heating liquid in the microwave, then you must also place a teaspoon in the container. This will ensure that the liquid does not boil suddenly after being removed from the microwave cavity.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious internal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch:
Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes.
Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on „Materials you can use in microwave oven or to be avoided in microwave oven.“ There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

<u>Utensils</u>	<u>Remarks</u>
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled „Microwave Safe“. Some plastic containers soften, as the food inside gets hot. „Boiling bags“ and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven


Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN

Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity
Your oven comes with the following accessories:

Instruction Manual 1

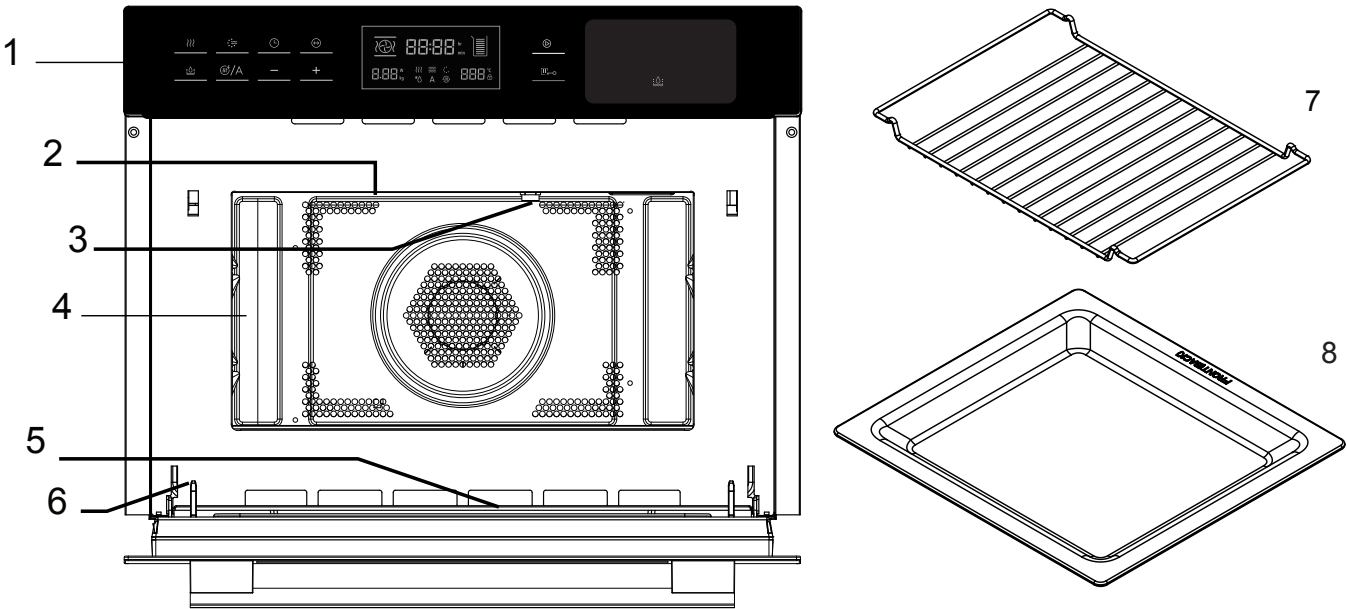

- 1. Control panel
- 2. Grill element
- 3. Light
- 4. Cavity
- 5. Door glass
- 6. Hinge
- 7. Grill Rack
- 8. Glass Pan

IMPORTANT INFORMATION ABOUT INSTALLING

- This appliance is NOT intended for use in a commercial environment.
- Please observe the installation instructions provided and note that this appliance should only be installed by a qualified technician.
- The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
- In case a new socket is needed, installation and cable connection must only be done by a qualified electrician. If the plug is no longer accessible following installation, a pole disconnecting device must be present on the installation site with a contact gap of at least 3 mm.
- Adapters, multiway strips and extension cords must not be used. Overloading can result in fire.
- If the appliance is not fitted with a supply cord and a plug, the connection equipment must have a contact separation in all poles that provide full disconnection, and the appliance must be incorporated in the fixed wiring in accordance with the wiring rules.


The accessible surface
may be hot during
operation.



Fitted units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cabinet must not have a back wall behind the appliance.
- A gap of at least 35 mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cabinet must have a ventilation opening of 250 cm² on the front. To achieve this cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The fitter is liable for any damage resulting from incorrect installation.
- The units into which the appliance is fitted must be heat-resistant up to 90 °C.


Installation dimensions

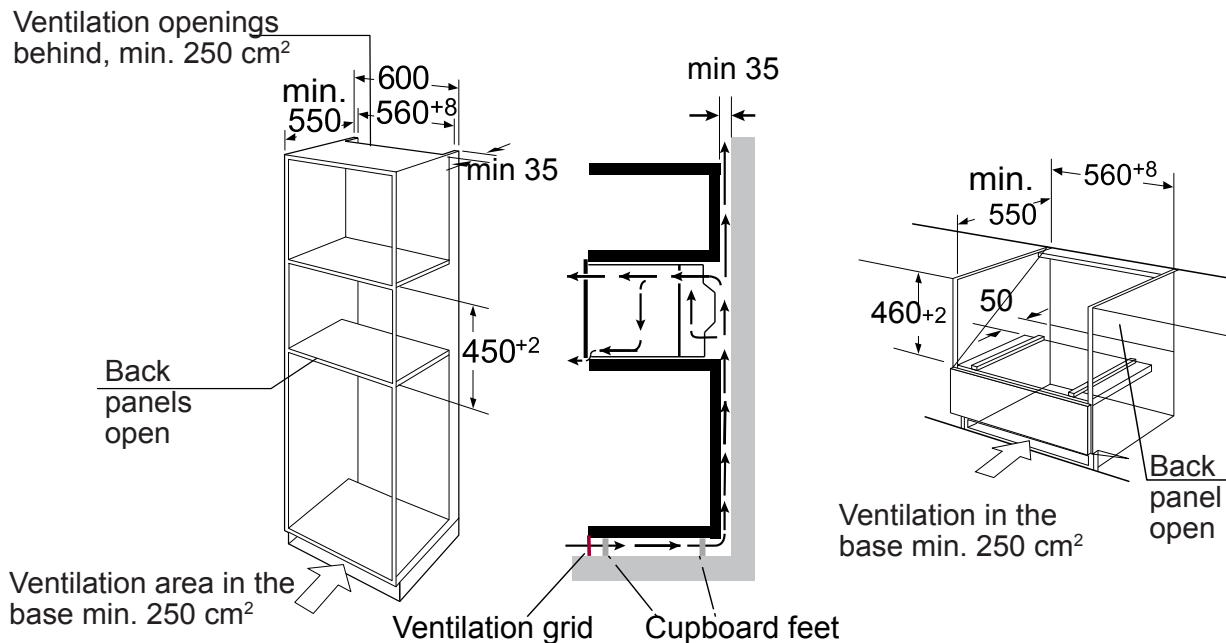

Note: There should be gap above the oven.

Building in

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
1. Carefully push the oven into the box, making sure that it is in the centre.
 2. Open the door and fasten the oven with the screws that were supplied.

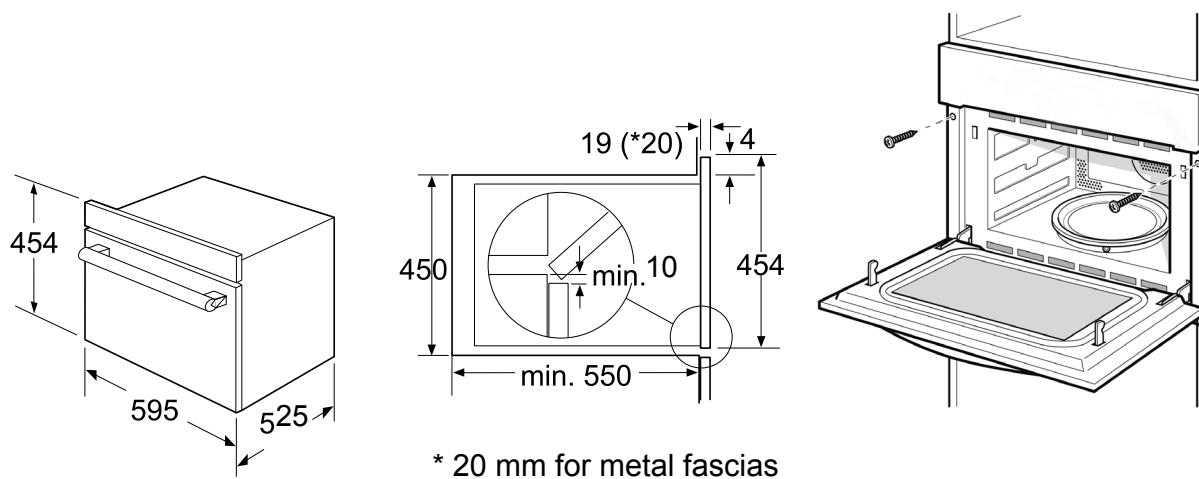

- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

Important information

Electrical connection








The appliance is fitted with a plug and must only be connected to a properly installed earthed socket. Only a qualified electrician who takes the appropriate regulations into account may install the socket or replace the connecting cable. If the plug is no longer accessible following installation, an all-pole isolating switch must be present on the installation side with a contact gap of at least 3 mm. Contact protection must be ensured by the installation.

BEFORE FIRST USE

Initial cleaning and heating

Removing the microwave oven all of the protection foil on the front.

For more information see the „CLEANING“. Before the first use of the appliance,

- To remove the new cooker smell, heat up the oven when it is empty and closed. One hour with  Hot air at 230°C is ideal.
- Ensure that no packaging remnants have been left in the cooking compartment.
- Before heating, it is best to wipe the microwave oven interior with a damp cloth.
- Touch “” keys. Appliance turn on, the main menu appears in the display.
- Touch the  key to set hot air function .
- Touch  and „- +“ key to set the temperature to 230°C.
- Touch the  key. Touch „- +“ key to set the cooking time to 60 minutes.
- Touch the  key. The oven begins to heat up.
- Let the appliance cool down to room temperature. Then use a solution of neutral detergent mixed with hot water to clean inside the microwave oven, then wipe dry with a clean soft cloth. Keep the door open until completely dry in the oven.

OPERATION INSTRUCTION

Control Panel



Touch keys and display

The touch keys are used to set the various additional functions. On the display, you can read the values that you have set.

Symbol	Function
	Steam
	Non-Steam
	Clock
	Parameters
	Water tank door key
	Preheat/Auto-programs
	Parameter adjustment
	Start
	Stop/Cancel

Function and screen display

Use the function keys to set the type of heating.

Function (symbol flash when operating)	Use
	Defrost, reheat and cooking.
	Select between the levels high, medium or low. This is ideal if you wish to grill several steaks, sausages, pieces of fish or slices of bread.
	For baking sponge cakes in baking tins, flans and cheesecakes as well as cakes, pizza and small baked items on the baking tray.
	Poultry goes brown and crispy. Baked casseroles and grilled dishes work out best using this setting.
	Use this function to cook meals quickly and at the same time give the meal a brown crust.
	Use this function to roast meal quickly.
	Poultry goes brown and crispy. Baked casseroles and grilled dishes work out best using this setting. And use the function to roast meals evenly.
	Use this function to cook Trout, Salmon Filet, Pikeperch, Prawns, Halibut filet, Herring.
	Use this function to cook potato without skin.

Function	Use
	Add steam during convection and make the food relatively moist.
	80 cooking programmes
	2 defrosting programmes

Parameter adjustment

Use the adjusting keys to set the parameters.

parameter	function
Auto menu	Select 80 automatic programmes.
Temperature	Select the temperature of cooking(°C). : 50,100,105,110...230
	: 35,100,105...180
	: 100,105,110...180
	: 100,90,80,70,60,50
	: 180,190,200,210,220
Weight	Set the weight of cooking.
Time	Set the time of cooking.
Microwave	Select microwave power. 100W, 300W, 450W, 700W and 900W

Cooling fan

Your appliance has a cooling fan. The cooling fan switches on during operation. The hot air escapes above the door.

The cooling fan continues to run for a certain time after operation.

Caution!

Do not cover the ventilation slots. Otherwise, the appliance will overheat.


Notes



- The appliance remains cool during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

1. Clock Setting


When the microwave oven is connected with power, „00:00“ will blink, buzzer will ring once.

1) Press „-“ or „+“, to set the right time (between 00:00 and 23:59.)


2) After you have set the right time, press „“. The clock has been set.

Note: 1) If you want to change the time, you have to press and hold the „“, button for 3 seconds. The actual time disappears and then the time will blink in the display. Press „-“, or „+“, to set the new time and press the „“, button to confirm the setting.


2) When you set the clock, long press „-“, or „+“, when adjusting 10MIN, short press time (each time you adjust 1MIN).


NOTE: When press „“, you could choose Microwave, Grill, Convection, Grill+Fan, MW+Convection, MW+Grill function, Microwave+Grill+Fan.

2. Microwave Cooking

1) Press the „“, button to activate the microwave function. „01:00“ will light in the display and the microwave icon appears.

2) Press „“, or „-“, or „+“ to select cooking mode.

3) Press „“, then press „-“, or „+“, to set the microwave power (900W, 700W, 450W, 300W, 100W). The default power is 900W.

4) Press „“, then press „-“, or „+“ to set the cooking time.

The max. cooking time depends on the power that has been set. When the power is 900W, the MAX. time is 30 minutes and other powers are 90 minutes.

5) Press „“, button to start cooking.






Microwave Power Chart

Microwave Power	100%	80%	50%	30%	20%
Display	900W	700W	450W	300W	100W






You can see from the table below from which power levels you can choose and for which foods the power levels are suitable.

Power level	Food
900 W	- Boiling water, reheating - Cooking chicken, fish, vegetables
700 W	- Reheating - Cooking mushrooms, shell fish - Cooking dishes containing eggs and cheese
450 W	- Cooking rice, soup
300 W	- Defrosting - Melting chocolate and butter
100 W	- Defrosting sensitive/delicate foods - Defrosting irregularly-shaped foods - Softening ice cream - Allowing dough to rise






3. Grill Cooking

- 1) Press the  button to activate the microwave function. „01:00“ displays and the microwave icon appears.
- 2) Press  or „-“ or „+“, to select grill mode. The default grill power is the third level.
- 3) Press , to choose the grill level.
- 4) Press „-“ or „+“, to select the level 3(the MAX.), level 2 or level 1(the MIN.).
- 5) Press , to select the time setting mode. The default time is 10 minutes.
Press „-“ or „+“, to select the cooking time of grill. The MAX.time is 90 minutes.
- 6) Press , button to start cooking.







4. Convection Cooking

- 1) Press the „“, button to activate the microwave function. „01:00“ displays and the microwave icon appears.
- 2) Press „“, or „-“, or „+“, to select convection mode.
The default temperature is 180 degrees.
- 3) Press „“, to enter to the temperature mode.
- 4) Press „-“, or „+“, to select temperature. The temperature is from 50 to 230 degrees. (50, 100, 105, 110, 115, 120, 125, 130, 135, 140, 145, 150, 155, 160, 165, 170, 175, 180, 185, 190, 195, 200, 205, 210, 215, 220, 225, 230)
- 5) Press „“, to select the time setting mode. The default time is 10 minutes.
Press „-“, or „+“, to select the cooking time. The MAX.time is 5 hours.
- 6) Press „“, button to start cooking.






5. Grill Fan Cooking

- 1) Press the „“, button to activate the microwave function. „01:00“ displays and the microwave icon appears.
- 2) Press „“, or „-“, or „+“, to select grill fan mode. The default temperature is 180 degrees.
- 3) Press „“, to enter to the temperature selection.
- 4) Press „-“, or „+“, to select the temperature. The temperature is from 35 to 180 degrees. (35, 100, 105, 110, 115, 120, 125, 130, 135, 140, 145, 150, 155, 160, 165, 170, 175, 180)
- 5) Press „“, to select the time setting mode. The default time is 10 minutes.
Press „-“, or „+“, to select the cooking time. The MAX.time is 5 hours.
- 6) Press „“, button to start cooking.

6. Microwave + Grill Cooking

- 1) Press the  button to activate the microwave function. „01:00“ displays and the microwave icon appears.
- 2) Press , or „-“, or „+“, to select the „MW+GRILL“ combination mode.
- 3) Press  to enter to the grill level selection.
- 4) Press „-“, or „+“, to select the level 3(the MAX.), level 2 or level 1(the MIN.).
- 5) Press  to enter to the microwave power level selection.
- 6) Press „-“, or „+“, to select the microwave power(700W, 450W, 300W, 100W). The default power is 300W.
- 7) Press  to select the time setting mode. The default time is 10 minutes.
- 8) Press „-“, or „+“ to select the cooking time. The MAX.time is 90 minutes.
- 9) Press , button to start cooking.

7. Microwave + Convection Cooking

- 1) Press the  button to activate the microwave function. „01:00“ displays and the microwave icon appears.
- 2) Press , or „-“, or „+“ to select the „MW+ CONV.“combination mode.
- 3) Press  to enter to the temperature selection.
The default temperature is 180 degrees.
- 4) Press „-“, or „+“ to select the temperature between 50 to 230degrees. (50, 100, 105, 110, 115, 120, 125, 130, 135, 140, 145, 150, 155, 160, 165, 170, 175, 180, 185, 190, 195, 200, 205, 210, 215, 220, 225, 230)
- 5) Press  to enter to the microwave power level selection.
- 6) Press „-“, or „+“ to select the microwave power (700W, 450W, 300W, 100W).
The default power is 300W.
- 7) Press  to select the time setting mode. The default time is 10 minutes.

8) Press „-“ or „+“ to select the cooking time. The MAX.time is 90 minutes.

9) Press „▶“ button to start cooking.

8. Microwave + Grill Fan Cooking

1) Press the „☼“ button to activate the microwave function. „01:00“ displays and the microwave icon appears.

2) Press „☼“ or „-“ or „+“ to select the „MW+GRILL+FAN“ combination mode.

3) Press „↔“ to enter to the temperature selection.
The default temperature is 180 degrees.

4) Press „-“ or „+“ to select the temperature. The temperature is from 100 to 180 degrees.(100, 105, 110, 115, 120, 125, 130, 135, 140, 145, 150, 155, 160,165, 170, 175, 180)

5) Press „↔“ to enter to the microwave power level selection.

6) Press „-“ or „+“ to select the microwave power (700W, 450W, 300W, 100W).
The default power is 300W.

7) Press „⌚“ to select the time setting mode. The default time is 10 minutes.

8) Press „-“ or „+“ to select the cooking time. The MAX.time is 90 minutes.

9) Press „▶“ button to start cooking.

9. Auto Cook

1) In standby mode, press „☼/A“ button once, the display „*Δ“ lights, go into defrost menu mode; press the key more than once, you can switch between the different cooking types such as d01, P01, S01, at this point you can press the „-“ or „+“ to choose defrost, non steam menu, steam menu switches between three types of cooking.

When the display „A“ lights, it enters into Menu Mode automatically with a default weight and a default cooking time setting. It will display either P01 or S01 which represents microwave oven function or steaming function respectively.

2) Press the „↔“, and flashing display shows P01 or S01, at this point, you can press „-“ or „+“ select the menu type (P01-P40 or S01-S40).

Note:

- 1) For non-steam menus (P01-P40), press „↔“ to switch to your preferred menu and key in the weight of food manually. Press „-“ or „+“ to set cooking time.
- 2) For the steam menu, at this time, if you need to adjust the default cooking time, you can press ⏪, then the default cooking time starts flashing on the display, at this point, press „-“ or „+“ to adjust the Cook time menu.

3) Press „▶“ button to start cooking.

NOTE:

- 1) After steam auto menu, the water pump will withdraw the water back to water tank, there will be some noise sound.
- 2) After steam auto menu, you need to clean the water on cavity and door panel.
- 3) If the menu need preheating, don't put the food in the oven during preheating. Only when the temperature is reached, can you put in the food to start cooking.

10. Defrost

- 1) In standby mode, press „⏪/A“ button once, you can activate defrosting function by switching to the defrost mode. You will see the display „*Δ“, lights and flashes on defrost mode. d01 will be displayed with default weight setting.
- 2) Press „↔“ to confirm the selected defrost mode and at the same time you can select the required weight setting by pressing „-“ or „+“
- 3) Press „▶“ button to start cooking.

11. Preheating Function

The preheating function can be activated after you have set the functions:

 



Convection, Grill fan, MW-convection, MW-Grill fan.

- 1) Press „⏪/A“ button. When the preheat icon appears in the display.
- 2) Press „▶“ button to start preheating. When the right temperature is reached, you will hear three beeps. You can stop the preheating by opening the oven door or by pressing the „⏪-O“ button.

 





Note: The preheating function only works if you have already chosen one of the modes above. During preheating, the microwave function is switched off.

During preheating, don't put the food in the oven. Only when the temperature is reached, can you put in the food to start cooking.

 





12. Steam Function

- 1) In standby mode, press „“, button, enter the steam mode, time lights up by default 10:00
In standby mode, press „water“ button, it allows you to enter into the steaming mode. By default the cooking time shows 10:00 and temperature to be 100 degree celsius.
- 2) Press the „“, key to switch to the temperature selected, the temperature flashes, at this point, press „—“, or „+“ to select a temperature (50, 60, 70, 80, 90, 100).
- 3) Press““, to select the time setting mode. The default time is 10 minutes.
- 4) Press„—“, or „+“ to select the cooking time. The MAX.time is 90 minutes.
- 5) Press „“, button to start cooking.

13. Convection+Steam Function

- 1) In standby mode, press „“, button, enter the steam mode, time light up by default 10:00.
Press „“, or „—“, or „+“ repeatedly to select Conv. + Steam mode, the icon is displayed, the default temperature is 180 degrees.
- 2) Press „“ to enter to the temperature selection.
- 3) Press „—“, or „+“ to select temperature.(180, 190, 200, 210, 220degree)
- 4) Press „“, button, adjust the steam(10, 20, 30), and the steam light will flash. Press „—“, or „+“ to set steam level (default 30 percent).
- 5) Press““, to select the time setting mode. The default time is 10 minutes.
- 6) Press„—“, or „+“ to enter the cooking time. The MAX.time is 90 minutes.
- 7) Press „“, button to start cooking.

 

14. Microwave+Steam Function



- 1) In standby mode, press „“, button, enter the steam mode, time lights up by default 10:00. Press „, or „-“, or „+“ to select the MW+Steam mode. The icon is displayed, then displays 300W.
- 2) Press „“, to enter to the microwave power level selection.
- 3) Press „-“, or „+“ to select the 100W). The microwave power(900, 700W, 450W, 300W, 100W) default power is 300W.
- 4) Press „“, button, adjust the steam, and the steam light will flash. Press „-“, or „+“ to set steam level (default 30 percent).
- 5) Press““, to select the time setting mode. The default time is 10 minutes.
- 6) Press„-“, or „+“ to select the cooking time. The MAX.time depends on the power that has been set. When the power is 900W, the MAX.time is 30 minutes and other powers are 90 minutes.
- 7) Press „“, button to start cooking.

The ratio of the steam under different microwave power:

Microwave Power	Steam Ratio
100W	10%, 20%, 30%
300W	10%, 20%, 30%, 40%, 50%, 60%
450W	10%, 20%, 30%, 40%, 50%, 60%, 70%
700W	10%, 20%, 30%, 40%, 50%, 60%, 70%
900W	10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%,90%, 100%

15. Lock-out Function for Children

Lock: In standby mode, press „“, for 3 seconds, there will be a long „beep“ denoting entering into the children-lock state and „“, indicator will light.

Unlock : In locked mode, press „“, for 3 seconds, there will be a long „beep“ denoting that the lock is released, and „“, indicator will disappear.

16. Display Specification

- (1) By default, all settings will be set in automatically after 10 seconds once the option has been selected
- (2) During setting program, after adjusted for 3 seconds, it will confirm automatically. Except auto menu, it will confirm after adjusted for 10 seconds.
- (3) When the oven is in setting state or pause state, including auto menu and defrost program, if no operation in 5 minutes, it will enter into the off state.
- (4) The oven lamp will light all the time if the door is open.
- (5) The oven lamp will light all the time if the oven is paused.
- (6) „▶“ button must be pressed to continue cooking if the oven door is open during cooking process.
- (7) The „⚠“ button can be press in any state to open the water tank

Steam note:

1. Before steam cooking:

When start the steam cooking mode, there will have alert beeping sound when it is short of water in water tank. The icon that shows water level will light on as well to remind adding of water

2. During steam cooking:

During the operation of steam cooking mode, there will also have alert beeping sound when it is short of water in water tank. The icon that shows water level will light on as well to remind adding of water

3. After steam cooking:

1-After steam function is finished, the water in boiler will be withdraw to water tank. This process lasts for about 1 minute.

2-During the process to withdraw the water back to water tank, if the water tank is full, the system will be beeping 10 times to remind you to empty the tank. After the water tank is empty, the system will continue to withdraw water.

Note: After steam cooking, please remove the water from water tank.

Defect codes


Below defect codes may occur during steam functions :

E-06: 1-Water tank is not close well.

E-05: water system abnormal, need to contact for Engineer to check, below is the possibilities.



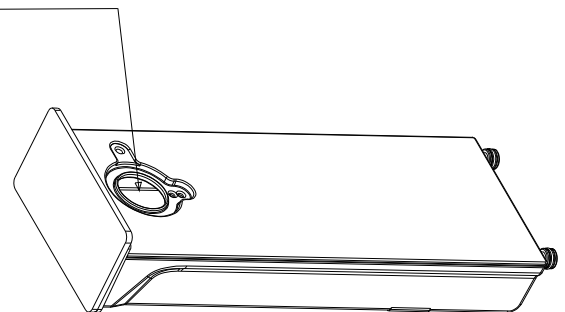

- 1-The water sensor is abnormal.
- 2-The water pipe is abnormal.
- 3-The water pump is abnormal.
- 4-The water tank is abnormal.

Add water to here



17. Auto Scale Removal Function

For best cleaning results, we recommend that you use detergent sodium citrate, for descaling steam microwave oven. Follow the manufacturer's instructions on the packaging. It is suggested that descaling function should be used after the steam function has been run for 20 hours.

- 1) Power up the system, remove the water tank, inject 1000ml of fresh water into the water tank, adding a suitable amount of descaling agent
- 2) Push the water tank into the appropriate location of the appliance.
- 3) In standby mode, press „/A„ button, the display „„ lights and it will show the default setting on weight, cooking time and so on under the d01 mode
- 4) Press „/A„ repeatedly, when „CLE „ indicator lighten t means to enter Scale Removal function. “Min” and default time „ 20:00 „ lighten, tank icon show the current water level (Water, lack of water, full of water), other icons disappear.
- 5) Press „„ to start the program.
- 6) Wait for a minute after the program has finished,remove the water tank and thoroughly clean the water tank. Thoroughly clean the water tank.)
- 7) Replace the fresh water, repeat steps 3 to 6.

Note: the descaling process shall not be closed. If the descaling process shut down before the end, the entire program must be started from step 3.

STEAM MENU

AUTO-MENU	DISPLAY	WEIGHT	POWER
Trout	S01	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Salmon Filet	S02	200	Steam100°C +100W
		300	
		400	
		500	
		600	
Pikeperch	S03	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Prawns	S04	200	Steam100°C
		300	
		400	
		500	
		600	
Halibut filet	S05	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Cockles	S06	200	Steam100°C +100W
		300	
		400	
		500	
		600	
Cod filet	S07	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Herring	S08	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Tuna filet	S09	200	Steam100°C +100W
		300	
		400	
		500	
		600	

Crab	S10	2	Steam100°C +300W
		3	
		4	
		5	
		6	
Chicken leg	S11	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Chicken breast	S12	200	Steam100°C +300W
		300	
		400	
		500	
		600	
		700	
		800	
Meatball	S13	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Turkey escalope	S14	400	Steam100°C +300W
		500	
		600	
		700	
		800	
Pork filet, whole	S15	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Sausages	S16	200	Steam100°C +100W
		300	
		400	
		500	
		600	
Runny Eggs	S17	1	Steam100°C
		3	
Eggs, hard	S18	1	Steam100°C
		3	
Eggs, soft	S19	1	Steam100°C
		3	
Brown rice + water	S20	200g+400mL	Steam100°C+ 450W/ Steam100°C+ 300W
		400g+800mL	
Rice + water	S21	200g+300mL	Steam100°C+ 450W/ Steam100°C+300W
		400g+600mL	

Eggplant/ Aubergine	S22	200	Steam100°C+300W
		300	
		400	
		500	
		600	
Beans	S23	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Broccoli	S24	200	Steam100°C
		300	
		400	
		500	
		600	
Cauliflower	S25	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Peas	S26	200	Steam100°C +300W
		300	
		400	
		500	
		600	
Potatoes with skin (whole, small)	S27	1	Steam100°C+ 300W
		2	
		3	
		4	
Potatoes with skin (whole, big)	S28	1	Steam100°C+ 300W
		2	
		3	
		4	
Potatoes without skin (pieces)	S29	200	Steam100°C+ 300W
		300	
		400	
		500	
		600	
Carrots	S30	200	Steam100°C+300W
		300	
		400	
		500	
		600	
Corn cobs	S31	2	Steam100°C+300W
		3	
		4	
		5	
		6	

Bell peppers	S32	200	Steam100°C
		300	
		400	
		500	
		600	
Hot peppers	S33	200	Steam100°C
		300	
		400	
		500	
		600	
Mushrooms	S34	200	Steam100°C+300W
		300	
		400	
		500	
		600	
Leeks	S35	200	Steam100°C+300W
		300	
		400	
		500	
		600	
Brussels sprouts	S36	200	Steam100°C
		300	
		400	
		500	
		600	
Celery	S37	200	Steam100°C+300W
		300	
		400	
		500	
		600	
		700	
		800	
Asparagus	S38	200	Steam100°C+100W
		300	
		400	
		500	
		600	
Spinach	S39	200	Steam100°C+300W
		300	
		400	
		500	
		600	
Courgette	S40	200	Steam100°C+300W
		300	
		400	
		500	
		600	

NO-STEAM MENU

AUTO-MENU	DISP LAY	WEIGHT	POWER
Melt chocolate	P01	100	450W
		150	450W
		200	450W
Melt butter	P02	100	450W
		150	450W
		200	450W
Sweet potato	P03	200	100W+220°C
		400	100W+220°C
		600	100W+220°C
Chicken Whole	P04	800	100W+220°C
		1000	100W+220°C
		1200	100W+220°C
Chicken leg	P05	200	450W+220°C
		300	450W+220°C
		400	450W+220°C
		500	450W+220°C
		600	450W+220°C
		700	450W+220°C
		800	450W+220°C
Chicken Wings	P06	200	300W+220°C
		300	300W+220°C
		400	300W+220°C
		500	300W+220°C
		600	300W+220°C
		700	300W+220°C
		800	300W+220°C
Fish Whole	P07	1	100W+220°C
		2	100W+220°C
		3	100W+220°C
Fish Steak	P08	200	100W+220°C
		300	100W+220°C
		400	100W+220°C
		500	100W+220°C
		600	100W+220°C
Fresh pizza	P09	200	Pre-heat/200°C conv.
		300	Pre-heat/200°C conv.
		400	Pre-heat/200°C conv.
		500	Pre-heat/200°C conv.
		600	Pre-heat/200°C conv.
Frozen Pizza	P10	200	100W+220°C
		300	100W+220°C
		400	100W+220°C
Cake	P11	400	Pre-heat/150°C
		500	Pre-heat/150°C
		600	Pre-heat/150°C

Roast Pork	P12	400	450W+220°C
		500	450W+220°C
		600	450W+220°C
		700	450W+220°C
		800	450W+220°C
		900	450W+220°C
		1000	450W+220°C
Chicken kabobs	P13	200	100W+220°C
		300	100W+220°C
		400	100W+220°C
		500	100W+220°C
		600	100W+220°C
Shrimp	P14	200	Pre-heat/220°C
		400	Pre-heat/220°C
		600	Pre-heat/220°C
Beef steak	P15	400	100W+220°C
		500	100W+220°C
		600	100W+220°C
		700	100W+220°C
		800	100W+220°C
		900	100W+220°C
		1000	100W+220°C
Barbecued spareribs	P16	200	100W+220°C
		400	100W+220°C
		600	100W+220°C
Chocolate cookies	P17	500	Pre-heat/180°C
Lemon cookies	P18	400	Pre-heat/200°C
Sausage	P19	200	Pre-heat/220°C
		400	Pre-heat/220°C
		600	Pre-heat/220°C
Finger food	P20	200	Pre-heat/220°C
		300	Pre-heat/220°C
		400	Pre-heat/220°C
Reheat	P21	200	900W
		300	900W
		400	900W
		500	900W
		600	900W
Potato	P22	1	900W
		2	900W
		3	900W
Beverage	P23	1	900W
		2	900W
		3	900W

Pasta	P24	100 (+800ml cold water)	700W
		150 (+1000ml cold water)	
		200 (+1200ml cold water)	
Soup	P25	1	900W
		2	
		3	
Pizza	P26	1	900W
		2	
		3	
Muffin	P27	1	900W
		2	
		3	
		4	
Oatmeal	P28	50+500ml water	900W/450W
		100+1000ml water	
		150+1500ml water	
Baked Apple	P29	2	700W
		3	
		4	
Sandwich	P30	1	900W
		2	
		3	
Popcorn	P31	50	900W
		100	
Fudge Brownies	P32	800	100W+180°C
Bread	P33	100	Grill Level3
		150	
		200	
Chick nuggets	P34	200	100W+220°C
		300	
		400	
		500	
		600	
French Fries	P35	200	100W+220°C
		300	
		400	
		500	
Oatmeal raisin cookies	P36	600	Pre-heat/180°C
pecan crisps	P37	500	Pre-heat/180°C

Peanut chocolate cookies	P38	500	Pre-heat/180°C
Hamburger	P39	2	100W+220°C
		4	
		6	
Muffin	P40	840 (70g*12)	Pre-heat/180°C

TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim Oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then Plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.



Service



www.blaupunkt-einbaugeraete.com

 **1800 252 878 658**

Australia
CustomerCare@blaupunktAU.com